


- | | | |
|---|--------------|--|
| 1 | Status LED | <p>Status indicator.</p> <ul style="list-style-type: none"> – Blinking: Device busy; device is in startup, software- or configuration update. – On: The device is ready |
| 2 | Reset | <p>Press at least 3 seconds for reboot and at least 10 second for a factory reset. The start of the factory reset is confirmed by all LEDs lighting up for a second. The button must be released immediately afterwards.</p> |
| 3 | USB | <p>USB 2.0 host port</p> |
| 4 | Ethernet | <p>Connect your router by using the ETH 1 port with your computer to start the configuration. Your router is configured as a DHCP server by default and has the IP address 192.168.1.1. Open this IP in your browser to reach the WEB-GUI.</p> |
| 5 | LTE | <p>SMA female connectors for LTE antennas. For MOB 1, A1 is the main, A2 the auxiliary port.</p> |
| 6 | Bluetooth LE | <p>SMA female connector (A3) for Bluetooth.</p> |

- 7 WLAN SMA female connectors for MIMO WLAN antenna. A3 is the main port, A4 is the auxiliary port. If only one WLAN antenna is used, it must be attached to port A3.
- 8 GNSS SMA female connector for GNSS antenna.
- 9 Power The router can be powered with an external source with the nominal input voltages 12VDC and 24VDC.
- 10 SIM cover Removing the SIM cover: Loosen the screw, remove it and then remove the cover.
Please close the cover again after inserting the SIM cards.
- 11 SIM holder Slots for 2 Micro SIM (3FF).
The card holders can be opened by sliding them carefully in the direction indicated by the arrow in the drawing below and lift it up.
Then insert the SIM cards with the chip facing to the back.

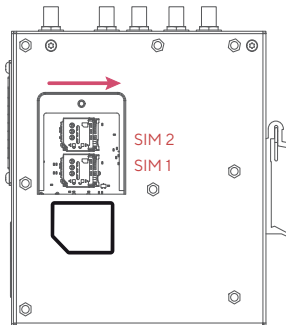

Close the holder again and shift it back until it's locked.
Please close the SIM cover after inserting the SIM card and tighten the screw again.