



NB2710 Overview

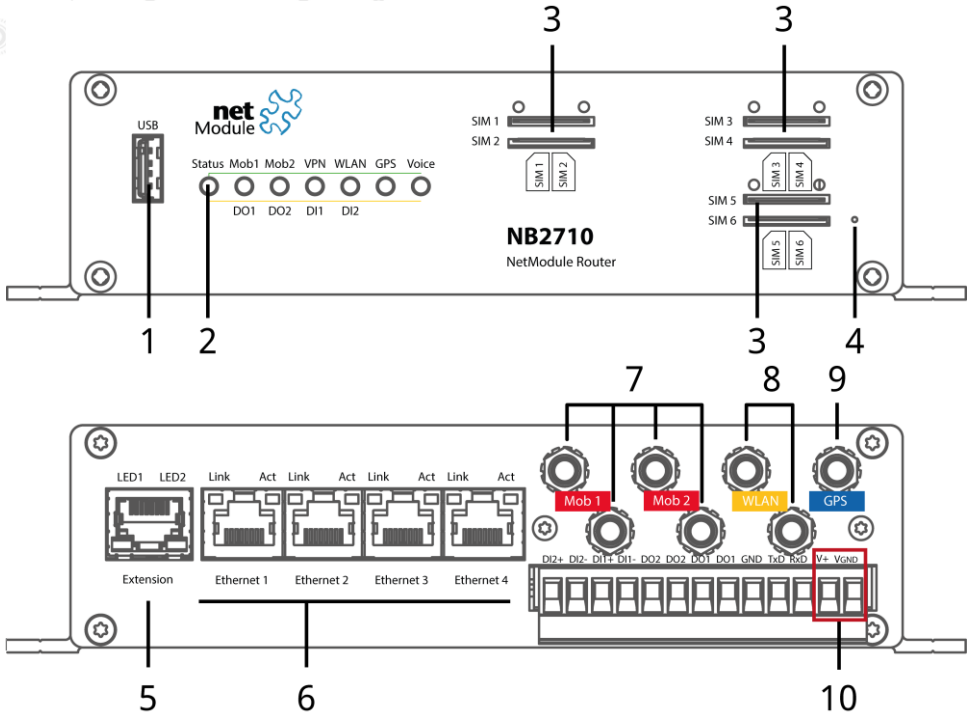

- 1 USB USB 2.0 host port

- 2 Status LED Status indicators.
 - Status blinking: The device is busy due to startup, software or configuration update.
 - Status on: The device is ready.

- 3 SIM slots Slots for 6 Mini SIM (2FF) cards. The SIM cards can be inserted by sliding it into one of the designated slots on the front panel.
 Push the SIM cards the using a small paper clip (or similar) until they snap into place. Insert SIM 1, 3 and 5 with the chip facing down, SIM 2, 4 and 6 with the chip facing up:

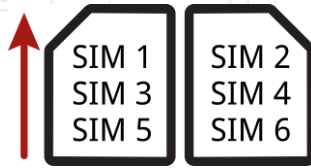

To remove the SIM cards, you will need to push them again in the same manner. The SIM cards will then pop out and can be pulled out.

- | | | |
|----|----------------|--|
| 4 | Reset button | Press at least 3 seconds for reboot and at least 10 second for a factory reset. The start of the factory reset is confirmed by all LEDs lighting up for a second. The button must be released then again. |
| 5 | Extension port | Connector for extensions. Please find detailed information in the router manual. |
| 6 | Ethernet | Connect your router by using the Ethernet 1 port with your computer to start the configuration. Your router is configured as a DHCP server by default and has the IP address 192.168.1.1. Open this IP in your browser to reach the WEB-GUI. |
| 7 | LTE/UMTS | SMA female connectors for LTE/UMTS antennas. For Mob 1, the upper connector is the main port, the lower is the auxiliary port. The same applies for Mob 2. |
| 8 | WLAN | SMA female connectors for WLAN antennas. The upper connector is the main port, the lower is the auxiliary port. |
| 9 | GPS | SMA female connector for a GPS antenna. |
| 10 | Power | The router can be powered with an external source with the nominal input voltages 12 _{VDC} , 24 _{VDC} and 48 _{VDC} . Please use the pins 1 (V _{GND}) and 2 (V+). |